


# SPINFIRE LAVA STRINGING MACHINE

## CONTROL PANEL MANUAL

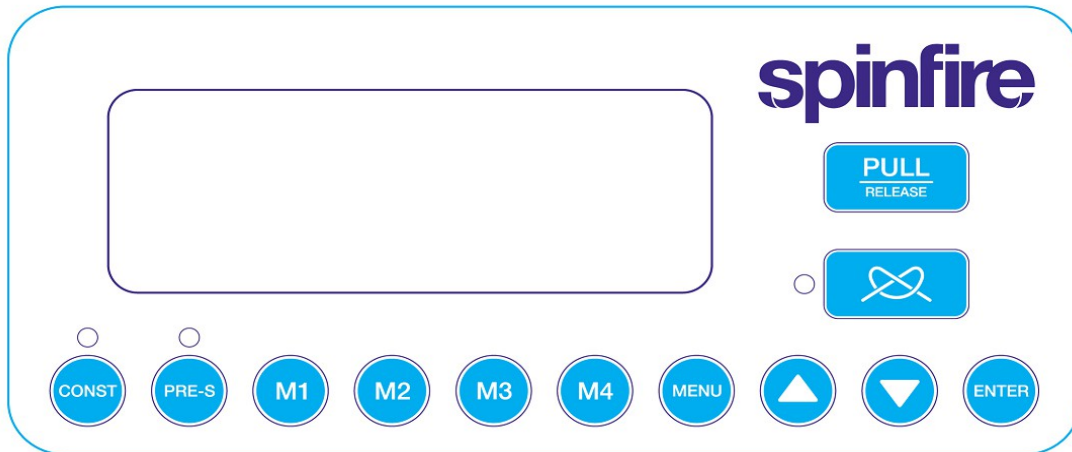

### CONST:

Press this button to pull a string constantly at a certain tension, if you do not want to use this feature, you can simply turn it off by pressing it again.

**Please note** we suggest you keep this on if you are unsure.

### PRE-S:

Press this button to add extra pull on a string when pulling at a set tension. You can set it at 10%, 15%, 20% or 25%. For example, when you set the tension at 60lbs and turn on the **PRE-S** at 10%, the machine will start by pulling 66lbs before coming to rest at 60lbs. To adjust the percentage of pre-stretch that you want, you need to press **PRE-S** and the **UP** or **DOWN** button. If you do not want to use this feature, you can simply turn it off by pressing it again.

### M1 M2 M3 M4:

You can save 4 tensions in these memory buttons. Once you have the tension set, simply hold down one of these 4 buttons for 2-3 seconds until it saves your setting. You can then recall that tension when needed in future.

### MENU:

To adjust the *unit (lbs or kg)*, *speed*, *sound* or *knot* you need to press the **MENU** button to get started. Once pressed, you can move between the 4 top menu items by using the **UP** and **DOWN** buttons. You can adjust the settings of each item by pressing the **ENTER** button, then use the **UP** and **DOWN** buttons to select a setting you need. Once you've made your

selection, simply press **ENTER** to save the setting. When you have finished making your adjustments, press the **MENU** button again to complete your selection.

In the menu:

*UNIT: KG / LB* determines which unit of measurement you prefer to work in.

*SPEED: 1 / 2 / 3* refers to the pulling speed, 1 is the slowest and 3 is the fastest.

*SOUND: 1 / 2 / 3* relates to the beeping volume. 1 is mute, 2 is low & 3 is high.

*TIE\_PRE: 5%, 10%, 15%, 20%, 25%* refers to the knot function. This is used when pulling the last string before a knot, to give it extra tension, compensating for the loss creating when tying the knot. For example, when you set a tension of 60lbs and turn on the *TIE\_PRE* at 20%, the machine will pull the string at 72lbs for that string.

**Please note:** you cannot go to the **MENU** if the gripper is not in the starting position.

**UP:**

Press this button to increase tension by 0.1lbs/kg. When you hold this button, the tension will increase by 1lbs/kg.

**DOWN:**

Press this button to decrease tension by 0.1lbs/kg, when you hold this button, the tension will decrease by 1lbs/kg.

**ENTER:**

Press this button to start and finish the settings of menu items.

**KNOT:**

Press this button to turn on the knot feature.

**Please note** this optional feature is only used for the last string before tying a knot. You need to enter the MENU area to see what percentage has been set for *TIE\_PRE*. Even though the **CONST** light will turn off, you can be assured that constant pull is still active when the knot function is working.

**PULL:  
RELEASE**

Press this button to activate the pull mechanism.